

AccuCure™ 60 UV & 80 UV Liquid Coater 380V Pre-Installation Form



Date: _____

Company Name: _____

Contact Name: _____

Address: _____

Country: _____

Telephone: _____

Fax: _____

E-mail: _____

Preferred date of installation: _____

Printer(s) used: _____

Inks you will be using: _____

Media you will be coating: _____

Please complete all pages and fax back to Neschen Americas a minimum of two weeks prior to preferred installation date.

**Neschen Americas Corporation
Attn: John Manuel
7091 Troy Hill Drive
Elkridge, MD 21075
Fax 800-966-4554**

Machine Specifications AccuCure 60 & 80 UV 380VAC		
	60 UV	80 UV
Machine Dimensions (diagram attached)	425cm L x 264cm W x 143cmH	425cm L x 314cm W x 143cm H
Crated Size	314 cm x 131cm x 178 cm	290 cm x 131cm x 178 cm
	265 cm x 216 cm x 216cm	320 cm x 212 cm x 204 cm
Net Weight	1089 kg/ 1588 kg	1225 kg/ 1905 kg
Electrical Requirements Dryer (Max current / Max wattage) Main cable NOT supplied	380VAC, 70AMP, 50/60Hz, three phase	380VAC, 100AMP, 50/60Hz, three phase
Electrical Requirements Coater (Max current / Max wattage) Main cable NOT supplied	220VAC, 15AMP, 50/60Hz, single phase	220VAC, 15AMP, 50/60Hz, single phase
Air Requirements (compressor not supplied)	100psi, 2cfm	100psi, 2cfm

AccuCure™ 60 UV & 80 UV Liquid Coater

380V Pre-Installation Form



Important Notes:

- The UV dryer section will be assembled by a Neschen Americas technician during training and installation. Customer should not assemble any part of the machine without consent by a Neschen Representative.
- The electrical power must be connected by a certified electrician during time of installation. Any costs associated with the electrical requirements are the responsibility of the customer.
- Machine operator must be present during the entire installation and training period.
- No water lines or drains are needed to operate the equipment.
- Installation and training by Neschen Technician will take approximately 2 working days.

Customer Responsibilities:

- Customer should visually inspect both coater unit and dryer unit to insure no damage occurred during transit. If damage is noticed, customer should contact Neschen with details prior to installation and training date.
- Customer needs to notify Neschen representative immediately and also file report with shipping company if any freight damage is expected or found.
- The customer is responsible for having on hand their initial stock of AccuCure™ liquid coating before a Technician can install the machine.
- The electrical power must be connected by a certified electrician during time of installation. Any costs associated with the electrical requirements are the responsibility of the customer.
- Customer is required to prepare location for duct work to accommodate the exhaust system.
- Customer must provide a fork lift at the time of delivery and installation to unload equipment and position accordingly.

AccuCure™ 60 UV & 80 UV Liquid Coater 380V Pre-Installation Form



PRE-INSTALLATION CHECK LIST

Yes/No

Do you have a "truck height" loading dock or suitable means to remove the crate from the truck (forklift with 5' extended forks)?	
Will the machine be installed in a location that is easily accessible or do you have the ability to move into that location prior to the arrival of the technician?	
Have you sent printed samples to Neschen Americas for test coating and have approved them?	
Do you have sufficient working area around the machine?	
Do you have sufficient media and substrates to coat during installation and training?	
Have you ordered your initial stock of AccuCure™ liquid laminate? If not, please call our Customer Service (888) 490-4232 or your local dealer to place your liquid order.	
Do you have at least one gallon of Isopropyl alcohol on hand for cleaning?	
Did you advise your electrician to supply the main power cable?	

Failure to comply with above items may result in additional charges.


CUSTOMER COMMENTS:

If you have any questions concerning this documentation, please contact:

Neschen Americas Corporation
Attn: John Manuel
7091 Troy Hill Drive
Elkridge, MD 21075
Tel: 888 490 4232 / 410 540 8900
Fax: 800-966-4554
j.manuel@neschenamericas.com

Authorized Signature: _____ Date: _____

AccuCure 60UV Machine Diagram (380V)

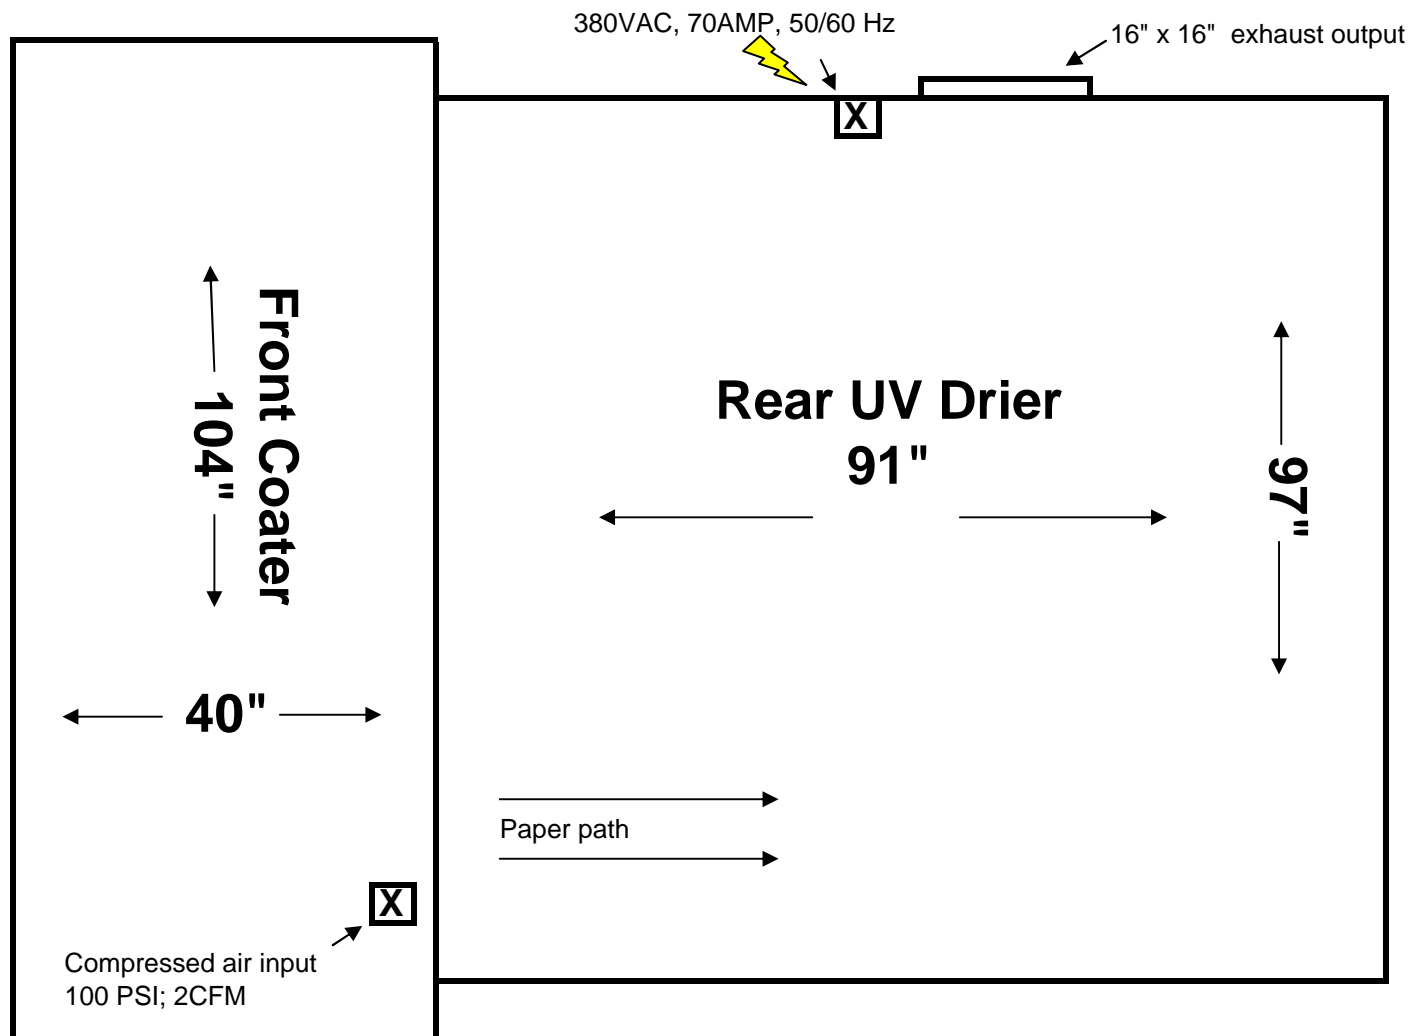

AccuCure 80UV Machine Diagram (380V)

